

SUSTAINAPOD™

SUSTAINABLE. PRE-ASSEMBLED. MODULAR.

OUTDOOR KITCHEN RANGE FOR WEBER

ASSEMBLY INSTRUCTIONS



ARBOR



BYRON



ELSTON



NEPTUNE

FOR WEBER Q SIT ON AND BUILT IN BARBECUES

ARBOR for Sit On Weber Q and Weber Baby Q Series

BYRON, ELSTON & NEPTUNE for Weber Family Q Built In Series (Q3600AU)

The models illustrated in these instructions may vary slightly from the model purchased

THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR ANY CONSEQUENCES DUE TO CABINETS THAT ARE NOT ASSEMBLED AS PER INSTRUCTIONS.

PARTS MAY CONTAIN SHARP EDGES & CORNERS, CARE MUST BE TAKEN WHEN HANDLING VARIOUS PIECES TO AVOID A MISHAP.

PARTS MAY BE HEAVY AND ASSISTANCE IS ALWAYS RECOMMENDED WHILE ASSEMBLING & MOVING CABINTRY INTO POSITION, AS PER INSTRUCTIONS.

ALWAYS WEAR PERSONAL PROTECTIVE EQUIPMENT (PPE) WHEN ASSEMBLING THE CABINETS.


This product complies with Australian Standard No. AS/NZS 5601.1 for gas installation (barbecues in residential premises and cylinders in an enclosure or recess). The warranty does not cover damage to products that is caused by hazardous gas, heat or fire.

The installation of products must comply with Australian Standards which override any of the product manufacturers' installation manuals.

IMPORTANT!

Refer to the product manufacturer's barbecue installation manual when determining a location for your barbecue.

TOOLS REQUIRED

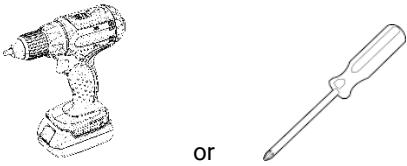


DRILL OR SCREWDRIVER (*optional*)



WRENCH



100% POLYURETHANE
CONSTRUCTION ADHESIVE
AND CAULKING GUN

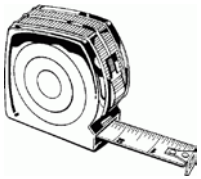

TAPE MEASURE (*optional*)



LEVEL



HEX KEY (*supplied*)

HANDY HINTS

- Read these *Assembly Instructions* from start to finish before attempting to assemble the cabinets.
- Two people are recommended when lifting and handling the cabinets.
- Always lift cabinets evenly when moving into position.
- Unpack the cartons, check off all items listed on the *Packing List* and *Box of Accessories*.
- Familiarize yourself with all the parts, sort and identify all the parts to the steps of assembly.
- Measure the intended space where the cabinet is to be positioned.
- Prepare the space where the cabinet is to be positioned, make sure the surface is suitable to hold the cabinet.
- The cabinet must be properly level for all door and drawer components to work properly.
- Follow each of the steps in these *Assembly Instructions* in the order they are written.

PACKING LISTS

Before commencing assembly, check all packing list items are supplied. If there is a discrepancy, please contact your retailer. The following packing lists assume standard inclusions (door cabinets) for each model and do not specify alternative packing list items for optional upgrades (sink/tap, bin drawer, 3-drawer cabinet and kickboard upgrades). Refer to the *Optional Upgrades Packing List*. *Shelves are only supplied for a standard door cabinet POD

ARBOR			BYRON		
CHECK	QTY	DESCRIPTION	CHECK	QTY	DESCRIPTION
<input type="checkbox"/>	1	2-DOOR CABINET	<input type="checkbox"/>	1	POD 1
<input type="checkbox"/>	1	SHELF	<input type="checkbox"/>	1	SHELF FOR POD 1*
<input type="checkbox"/>	1	BENCHTOP	<input type="checkbox"/>	1	POD 2 – BBQ CABINET
<input type="checkbox"/>	1	BOX OF ACCESSORIES	<input type="checkbox"/>	1	SHELF FOR POD 2
			<input type="checkbox"/>	1	POD 3
			<input type="checkbox"/>	1	SHELF FOR POD 3*
			<input type="checkbox"/>	2	BENCHTOP
			<input type="checkbox"/>	1	BENCHTOP – RAIL
			<input type="checkbox"/>	1	BOX OF ACCESSORIES

ELSTON			NEPTUNE		
CHECK	QTY	DESCRIPTION	CHECK	QTY	DESCRIPTION
<input type="checkbox"/>	1	POD 1	<input type="checkbox"/>	1	POD 1
<input type="checkbox"/>	1	SHELF FOR POD 1*	<input type="checkbox"/>	1	SHELF FOR POD 1*
<input type="checkbox"/>	1	POD 2 – BBQ CABINET	<input type="checkbox"/>	1	POD 2 – BBQ CABINET
<input type="checkbox"/>	1	SHELF FOR POD 2	<input type="checkbox"/>	1	SHELF FOR POD 2
<input type="checkbox"/>	1	POD 3	<input type="checkbox"/>	1	POD 3
<input type="checkbox"/>	1	SHELF FOR POD 3*	<input type="checkbox"/>	1	SHELF FOR POD 3*
<input type="checkbox"/>	1	POD 4	<input type="checkbox"/>	1	POD 4
<input type="checkbox"/>	1	SHELF FOR POD 4*	<input type="checkbox"/>	1	SHELF FOR POD 4*
<input type="checkbox"/>	1	BENCHTOP	<input type="checkbox"/>	2	BENCHTOP
<input type="checkbox"/>	1	BENCHTOP LONG	<input type="checkbox"/>	1	BENCHTOP LONG
<input type="checkbox"/>	1	BENCHTOP – RAIL	<input type="checkbox"/>	1	BENCHTOP – RAIL
<input type="checkbox"/>	1	BOX OF ACCESSORIES	<input type="checkbox"/>	1	BOX OF ACCESSORIES

Box of Accessories			Optional Upgrades Packing List		
CHECK	QTY	DESCRIPTION	CHECK	QTY	DESCRIPTION
<input type="checkbox"/>	4	ARBOR – S/S LEGS	<input type="checkbox"/>		SINK & TAP (to be installed)
<input type="checkbox"/>	8	BYRON - S/S LEGS	<input type="checkbox"/>		BIN (drawer-mounted in POD)
<input type="checkbox"/>	12	ELSTON/NEPTUNE - S/S LEGS	<input type="checkbox"/>		3-DRAWERS (mounted in POD)
<input type="checkbox"/>	12	DEMON BOLTS	<input type="checkbox"/>		KICK BOARD PLATES WITH CLIPS
<input type="checkbox"/>	1	ASSEMBLY KEYS			
<input type="checkbox"/>	1	BAG OF DOCUMENTS: ASSEMBLY, CARE, WARRANTY			

STEP 1: FOUNDATION PREPARATION


IMPORTANT! Refer to the product manufacturer’s barbecue installation guide when determining a location for your barbecue.

- Measure the site for space
- Clean and prepare the site ready for installation
- Check the site for stability
- Check the site orientation for weather

PRE-ASSEMBLY

- Unpack the boxes and check for damage
- Lay units on their back on a flat clean surface next to the intended installation site

Refer to your original Order Form for the layout of PODS 1-4

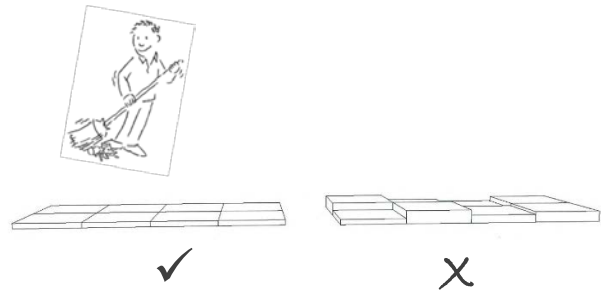

STEP 2: FEET ASSEMBLY

- In a clockwise direction, screw each of the legs onto the base



STEP 3: CABINET ASSEMBLY

- Screw the 12 demon bolts into the 4 holes on each side of POD 2 (BBQ Cabinet) as shown

Tip: Align the cabinet (carcass) fronts of each cabinet carefully before tightening bolts fully

- With at least two people, stand the cabinet up and move into position carefully, without dragging
- Once into final position, level cabinet using adjustable legs
- For Elston and Neptune models, level POD 4 at the same level as POD 3 to hold benchtop evenly above fridge

Tip: Level the cabinets from front to back - adjust all legs evenly. For kickboard option-legs should be wound down at least 10mm.



STEP 4: BENCHTOP ASSEMBLY

- Place a small bead of 100% polyurethane construction adhesive (not supplied) around each cabinet (carcass) top, as shown
- Sit each top into position, making sure all bench top backs are flush with cabinet backs and all side over hang margins are evenly spaced
- Allow adhesive to set fully



Door and Drawer Adjustment

Doors and drawers are pre-adjusted. In the event you need to make minor adjustments,

- To adjust doors, use a screwdriver to rotate adjusting screws clockwise and anticlockwise as necessary
- To adjust drawers, remove side-cover and use a screwdriver to rotate adjusting screws clockwise and anticlockwise

Tip: Go to blum.com.au for more detail



Installation of Optional Kickboard Upgrade

The kickboard plate comes with clips installed onto the back of the plate. Align clips with legs and push firmly to connect. Once connected, push down evenly so plate base is touching the foundation.

Note: The kickboard is designed to be removable and have ventilation. It will not cover the full height of the leg.



Barbeque Installation

Refer to your barbecue manufacturer’s installation guide

Installation of Optional Sink/Tap Upgrade

We recommend that sink and tap installation be done by a professional